

North America

support@customerservice-sales.com


EU&UK

support-eu@customerservice-sales.com

Japan

support-jp@customerservice-sales.com

# GT801 Dash Camera

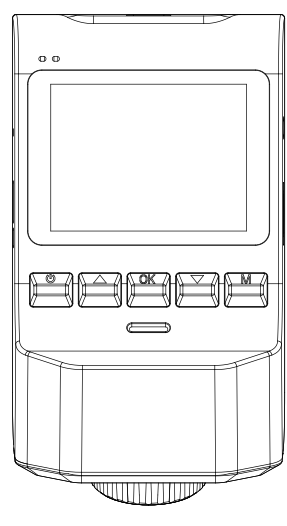

## USER MANUAL

Before use, we recommend carefully reviewing this user manual and storing it for future reference.

V.1.03

≡ Contents ≡

01 NOTICE

02 WHAT'S IN THE BOX

03 PRODUCT OVERVIEW

05 INSTALLATION INSTRUCTIONS

09 ALL BUTTONS EXPLANATIONS

10 FUNCTIONS OVERVIEW

15 SETTINGS

20 CONNECT THE CAMERA WITH THE APP

24 GPS FUNCTION AND CHECK THE VIDEO WITH GPS DATA

26 SPECIFICATIONS

27 TROUBLESHOOTING GUIDE

29 WARRANTY AND CUSTOMER SERVICE

Thank you for purchasing our product. We hope that this user manual could help you get started with basic features that our camera has.

NOTICE

1. Please read this instruction manual carefully before using the camera. It contains important information for your safety as well as operating and maintenance instructions.

2. Follow all safety precautions in order to prevent damage due to improper use of the camera.

3. In the event of improper use or erroneous handling, no liability can be assumed for any possible damage which may occur.

4. You should not install this dash camera at a place that would obstruct or reduce a driver's view. Make sure your usage complies with pertinent vehicle codes of your state, province, territory or country.

5. You should release the required record notification to the occupant in the car, if you will record sounds or other information / signals related to car activity.

6. You should avoid extended exposure of the dash cam to direct sunlight or extreme temperatures (either high or low temperature) which tend to degrade or damage the unit and its normal functionality.

7. Do not try to open the cover or try to repair it yourself. If the accessories for this device have any problem, please contact the seller for assistance.

8. Pay careful attention when cleaning the lens surface. Use a soft, moist cloth to clean the lens to avoid compromising video quality.

9. This device is intended to be used inside the vehicle only.

10. Do not expose this product to rain, moisture or water under any circumstances, or it will result in external or internal damage.

11. Do not operate or install the camera while driving, or attempt to change any setting, etc.

12. Please insert a formatted memory card into the product before your first use(see on page 04).

WHAT'S IN THE BOX

GT801 Dash Camera

Rear Camera Kit

Easy Pry Tool

3M

Car Charger


Electrostatic Sticker

User Manual

INSTALLATION INSTRUCTIONS


Step 1

Clean the front windshield and attach the Electrostatic Sticker to it.

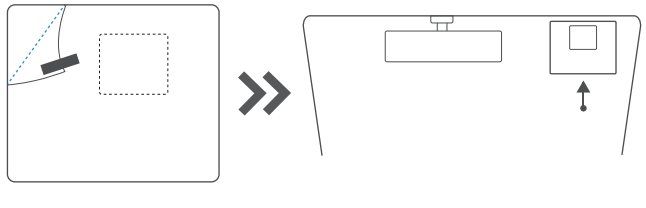

Step 2


Peel off the 3M adhesive pad and attach the stand to the Electrostatic Sticker.

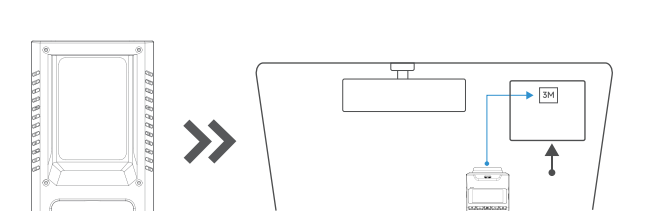

Tip: Mount the camera close to the rearview mirror for best results.


Step 3

Rotate the camera to adjust the angle for the best view.

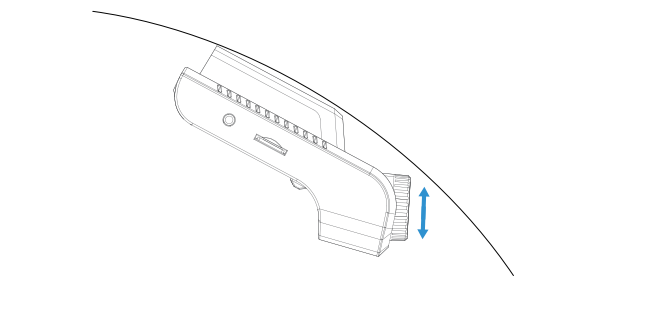

Step 4

Connect the Car Charger Type-C connector to the Camera's Type-C Port, then plug the other end into the Cigarette Lighter Receptacle in the vehicle.

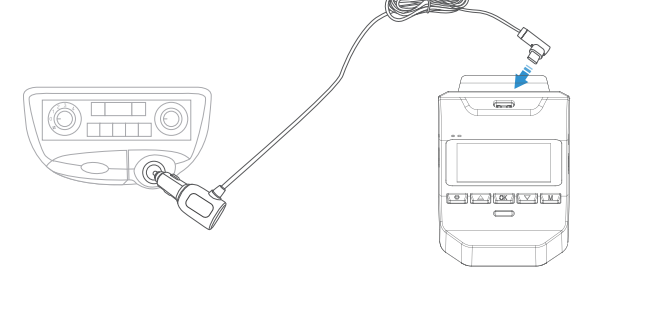

PRODUCT OVERVIEW

Camera

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

Power Button

Down Button

Speaker

OK Button

Menu Button

Up Button

AV In

Memory Card Slot

Reset

Mic

Mount with 3M Adhesive Pad

Camera

Type-C Port for Powering the Camera

Rear Camera Kit


Mounting Bracket

Rear Camera

AV Out Port


Step 5

Note: e suggest fixing the car charger cable along the edge of the windshield for a neater and more organized car.

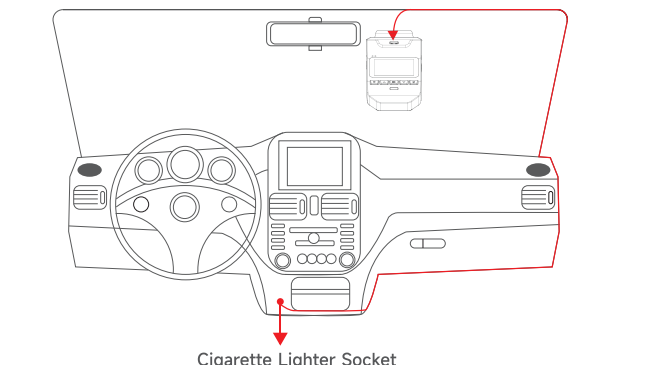


Step 6

Connect the AV Out of the rear camera to the AV In port of the Dash Camera. Then, thread the black cable of the Rear Camera through your vehicle to the back.

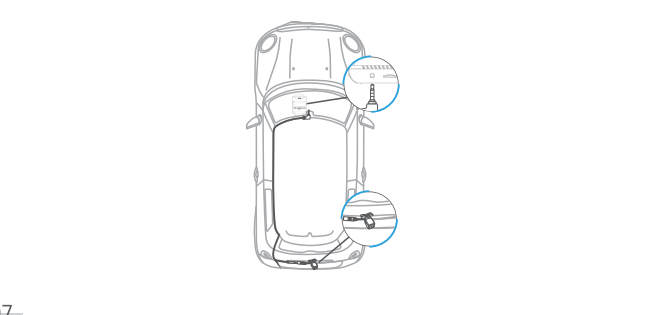


Step 7

Insert a memory card into the dash camera and format it (see page XI).

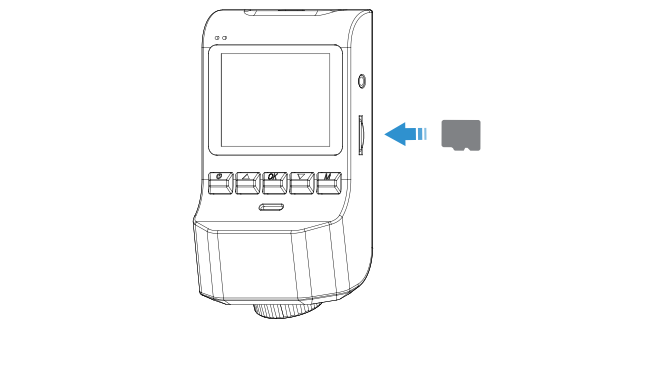

Step 8

Start your vehicle's engine to verify the correct installation and functionality of the dash camera.



ALL BUTTONS EXPLANATIONS

Power Button

• Press and hold to power on or power off the dash camera.

• Shortly press to turn on or turn off the screen when the camera is working.

OK Button

• Press to confirm your selection.

• Press to start/end recording.

• Press to play/pause the selected video in playback mode.

• Press and hold to bring up the pop-up window of deleting a file in playback mode.

Down Button

• Press to move to the previous option/file and adjust the value for the date & time

• Press to enable or disable the microphone in video mode.

• Press to check the saved videos and photos when the camera is not recording.

Menu Button

• Press to lock and unlock the current video in video mode.


• Press to check all the detailed camera settings when the camera is not recording.

• Press and hold to directly turn on the WiFi of the camera when it's not recording.

FUNCTIONS OVERVIEW


1. Video Mode

After the dash camera is powered on, it will enter the video mode by default. A flashing red dot on the top left corner indicates that the camera is recording.

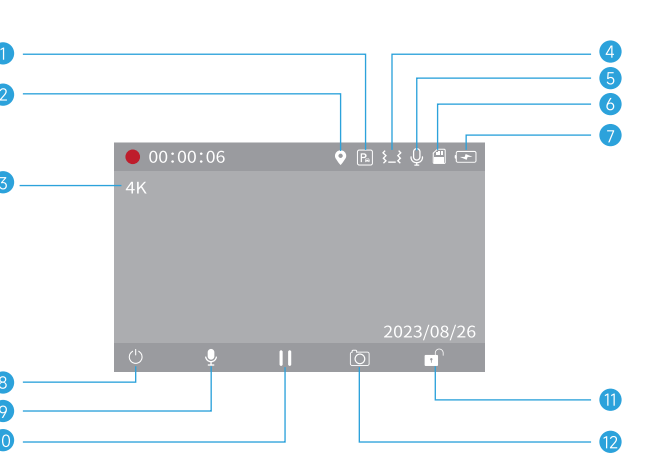


2. Playback Mode

Press the OK button to enter the playback mode. You can check the saved videos and photos when the camera is not recording.

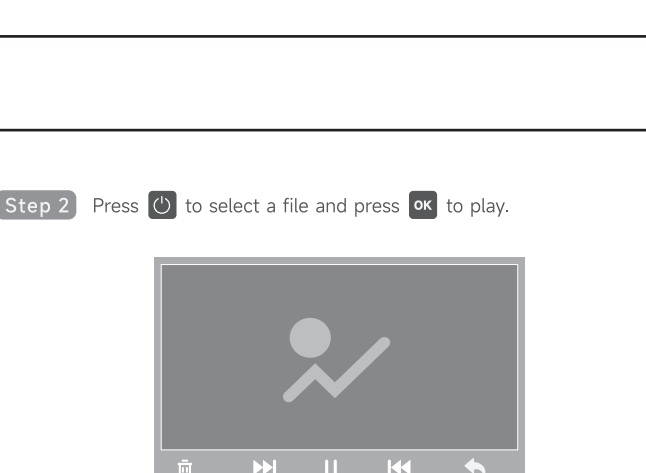


3. Check the Videos and Photos

When the camera is not recording a video, press the OK button to check all the videos and photos.

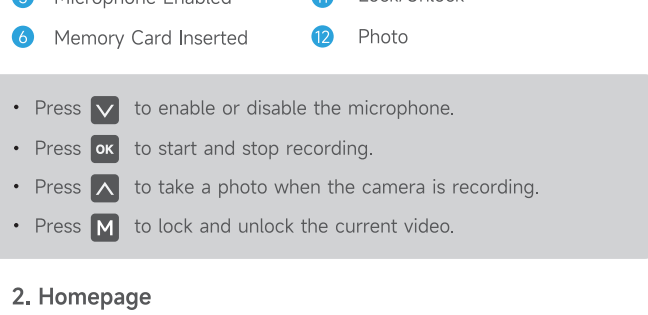


4. Homepage

Press the OK button to stop recording and save a video, then enter the homepage.

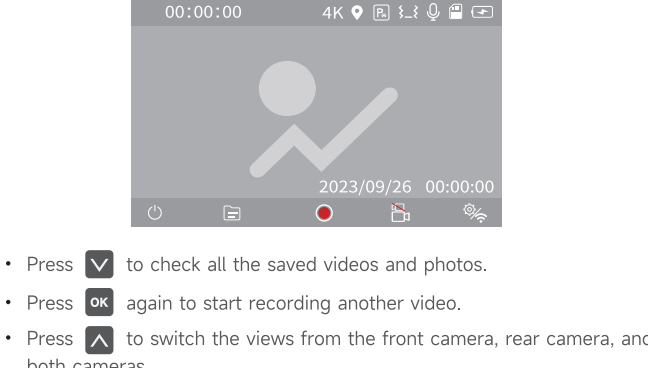

5. Settings

Press the Menu button to enter the settings menu. You can adjust the camera settings according to your needs.

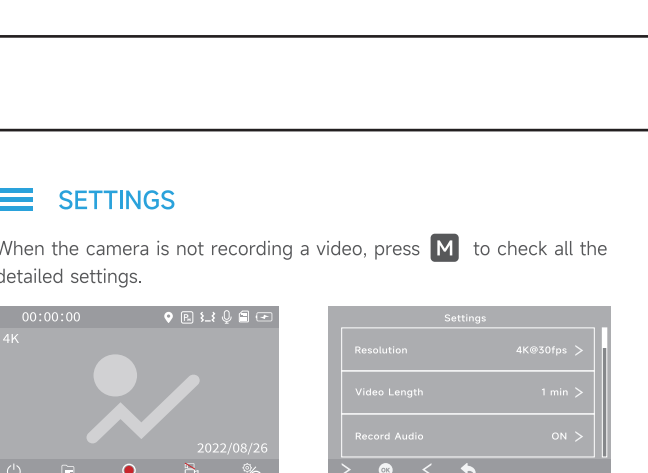

Rear urgent video

Includes the locked videos recorded by the rear camera when there is a collision during driving or parking, and the videos that are manually locked by pressing the M button when the camera is recording.


Rear photo

Includes the photos taken by the rear camera.

How to play and delete a file?


We take a video as an example.

Step 1: Press the OK button to enter the selected folder.

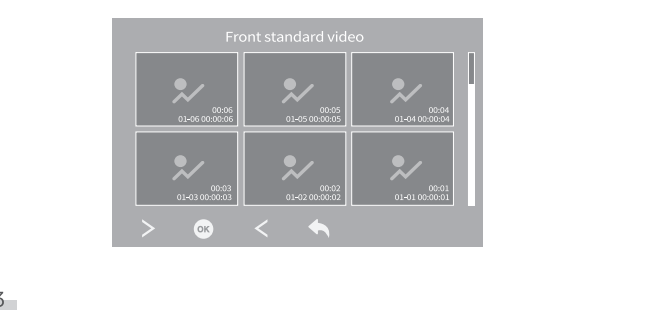

Step 2

Press the OK button to select a file and press the OK button to play.

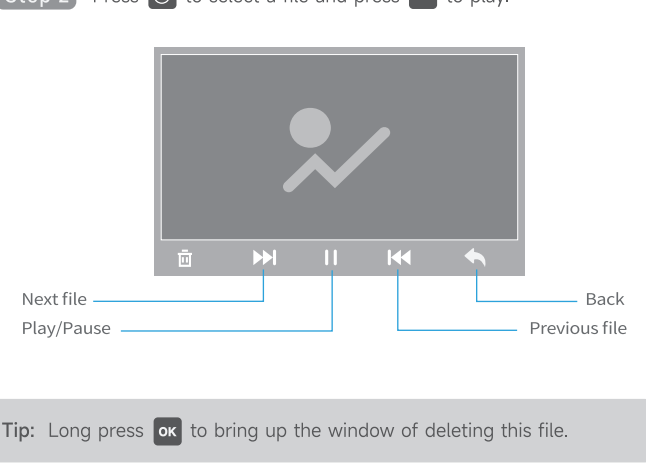

Tip: Long press the OK button to bring up the window of deleting this file.

4. File Transfer


Option 1: Remove the card from the camera, then connect it to your computer via a card reader(not included) to make a file transfer.

Option 2: Directly connect the camera to your computer via a micro USB cable, then go to Settings > USB Mode to set it as USB storage. Then check, copy and delete the files.

Connect the camera with a smart phone via WiFi, then download files to your phone in the VeeCar App.

SETTINGS

When the camera is not recording a video, press the OK button to check all the detailed settings.

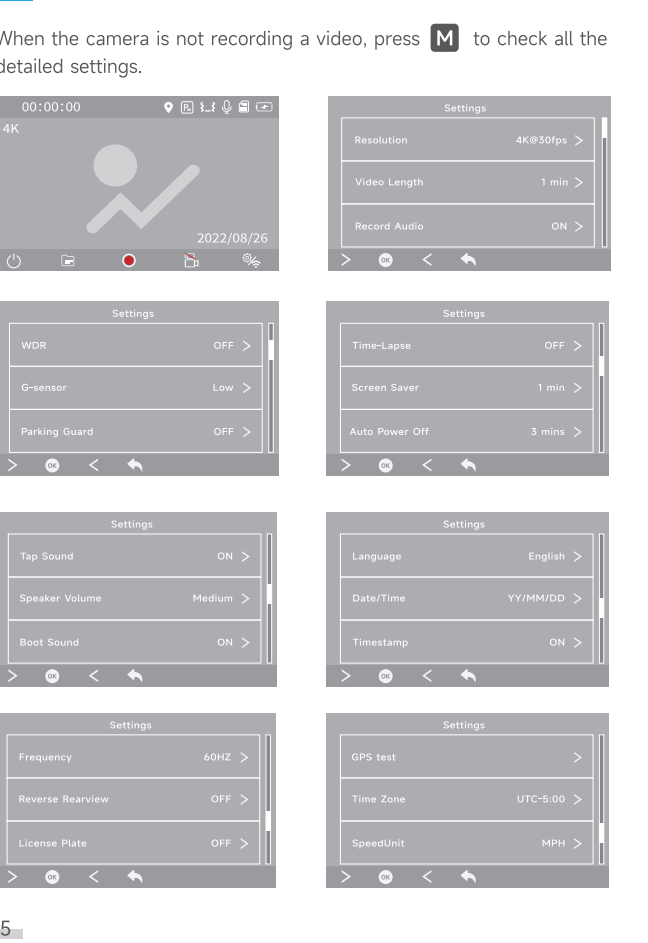

Resolution

Change the resolution of the front camera. Options include 4K@30fps and 2.5K@30fps. (The resolution of the rear camera is 1080P only.)

Video Length

Change the recording time of each video. The recording time is set to be 1 minute by default. You can choose from 1 min, 2 mins, and 3 mins.

Record Audio

Turn on or turn off the audio when recording videos.

WDR

Wide Dynamic Range. Setting it to ON implies that the camera will automatically handle bright and dark environments to improve the recording quality.

G-sensor

Set the different G-sensor sensitivity of collision detection when driving. You can select from 0 to 15 as needed. If you select 15, the camera would automatically lock the current video when your car encounters a minor collision. A flashing yellow dot on the upper left corner will be displayed, indicating the camera is locking the current video. This video will not be overwritten.

Parking Guard

Turn on or turn off the function of Parking Guard. If you turn it on, the camera would record a video when your car encounters a collision during parking.

Note: An extra hardware kit(not included) is required for using this function. Please contact us for more information.

Time-Lapse

Set the frame rate of the video. After enabling this option, every 30 minutes of videos will be compressed to 1 minute and then be saved in the memory card.

Note: An extra hardware kit(not included) is required for using this function. Please contact us for more information.

Screen Saver

Set the time to enter sleep mode after a certain period of inactivity. Options include OFF, 1 min, and 3 mins.

Tap Sound

Turn on or turn off the sound when pressing the buttons.

Speaker Volume

Set the volume of the speaker for the camera. You can choose from Mute, Low, Medium, and High.

Boot Sound

Turn on or turn off the sound when the camera is powered on and powered off.

Language

Set the language of the dash camera.

Date/Time

Set the date & time of the dash camera, and set the date & time format. Press the OK button to select, then press the OK button to confirm and move to the next option.

Summer Time

When set to ON, the clock will go forward by one hour. When set to OFF, the clock will go back by one hour.

Timestamp

Show or hide the date and time watermark on the recorded videos and captured photos.

Frequency

Set the refresh rate between 50Hz and 60Hz.

Reverse Rearview

Default

Tap to bring up the pop-up window to restore the dash camera to the factory settings.

Version


Check the product model and software version.

CONNECT THE CAMERA WITH THE APP

1. Connect the Dash Camera with the APP

Option 1: Scan the QR code below or go to Google Play/APP store to search for "VeeCar" to download and install the APP on your mobile device.

Note: For Android mobile phones, we recommend searching for "VeeCar" in Google Play to download and install the app. If you choose to scan the QR code for direct installation, you may receive a security warning from the app. This is a verification warning that comes with the Android system, and the iOS system does not encounter this issue.



Step 2: Make sure the dash camera is powered on and the distance between your mobile device and the camera is within 5 meters.

GPS text

This option is only available when the GPS receiver is installed. After installation, you can check the detailed GPS information here.

Time Zone

Set the time zone of your location.

Speed Unit

Set the unit of the speed from KM/H and MPH. The speed will be only displayed on the screen after you install the GPS receiver.

Wi-Fi App

Check the QR code to download and install the App; check the dash camera's WiFi name(SSID) and password.

USB Mode


Set the USB mode when you connect the dash camera to a PC. Select USB storage to transfer files between the camera and your PC, while select Charge to charge the camera only.

Format

Tap to bring up the pop-up window to format the memory card.


Step 3:

Launch the "VeeCar" APP and grant the permissions requested by the APP. (Choose registration or skip the login first), then tap "Add Camera" to check the wizard and start connecting.

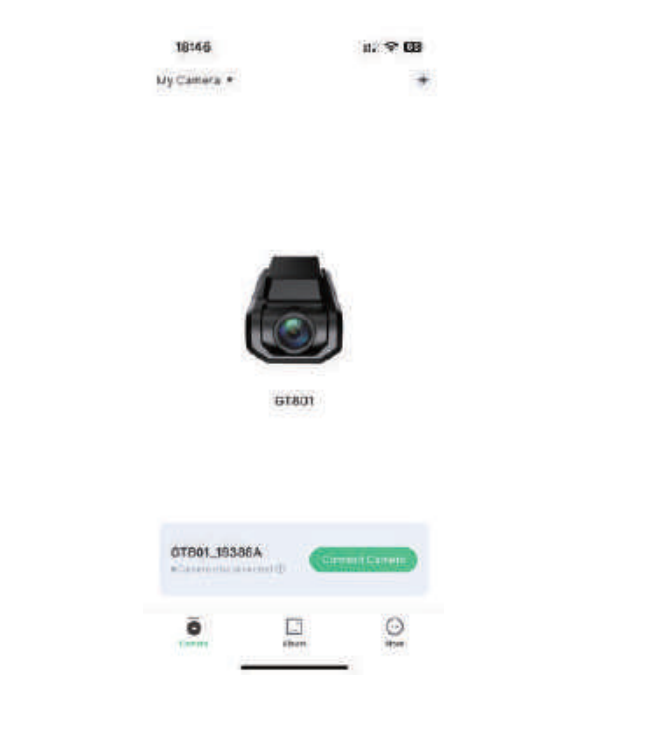

Step 4:


Go to the Settings > WLAN of your mobile device to search for WiFi of "GT801\_\*\*\*\*\*" and enter the password 12345678 to connect to the camera's hotspot.

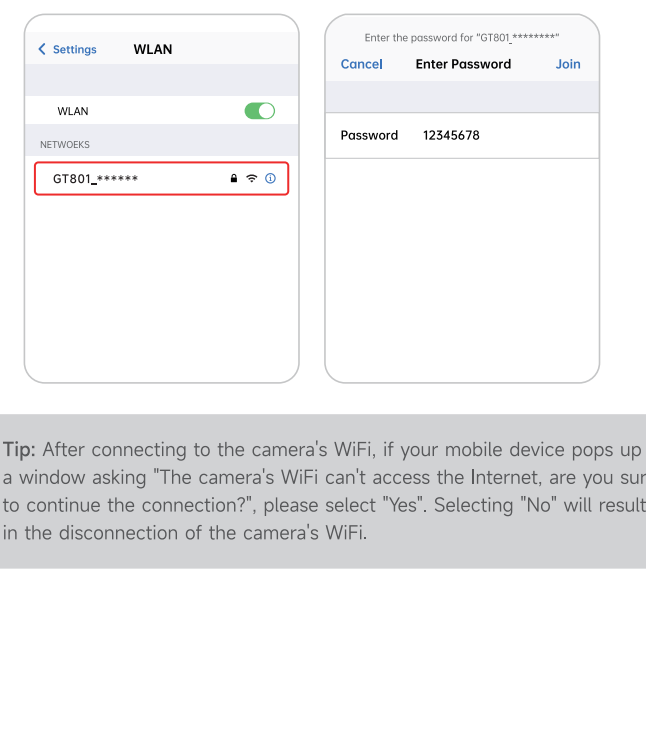

Tip: After connecting to the camera's WiFi, if your mobile device pops up a window asking "The camera's WiFi can't access the Internet, are you sure to continue the connection?", please select "Yes". Selecting "No" will result in the disconnection of the camera's WiFi.

2. Overview of the APP

Homepage

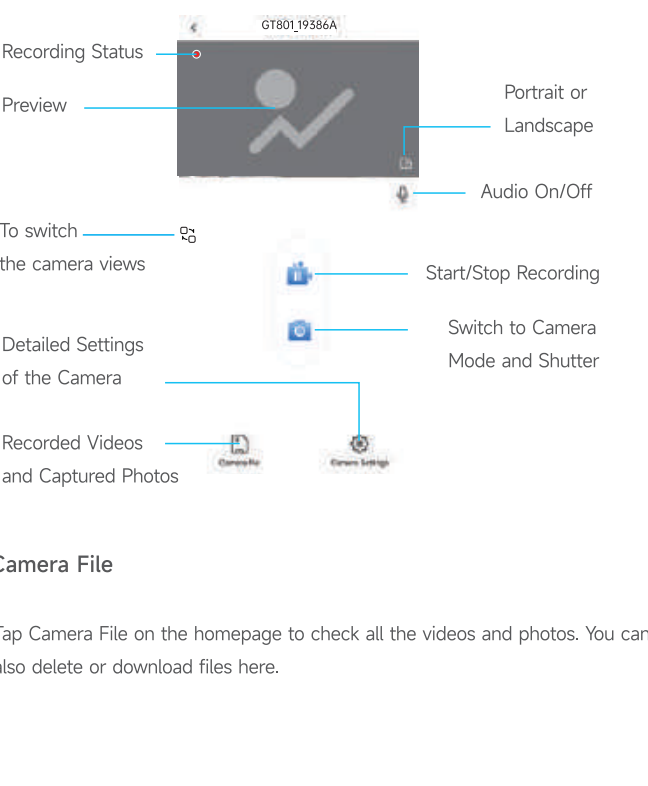

Camera File


Tap Camera File on the homepage to check all the videos and photos. You can also delete or download files here.

GPS FUNCTION AND CHECK THE VIDEO WITH GPS DATA

This product comes with a GPS receiver and you can check the GPS track of your video.

Step 1: Take off the camera from the mount, connect it with your PC via the Type-C cable, and then select USB Storage in the USB Mode.

Step 2: Go to your computer to access the folder of the camera, then open the file named gpsplayer.

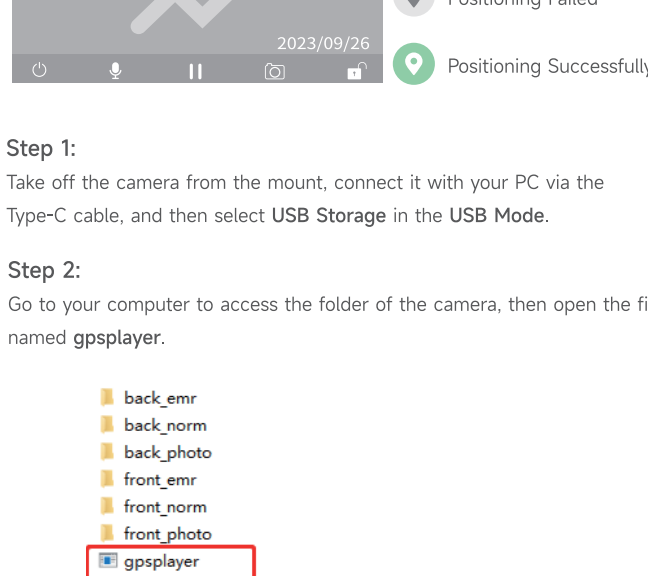


Step 3:

Follow the tips to install it into your PC and click this application again to open it after the installation is completed.

Step 4:

Click the OK button on the upper right corner to start setting up the player.

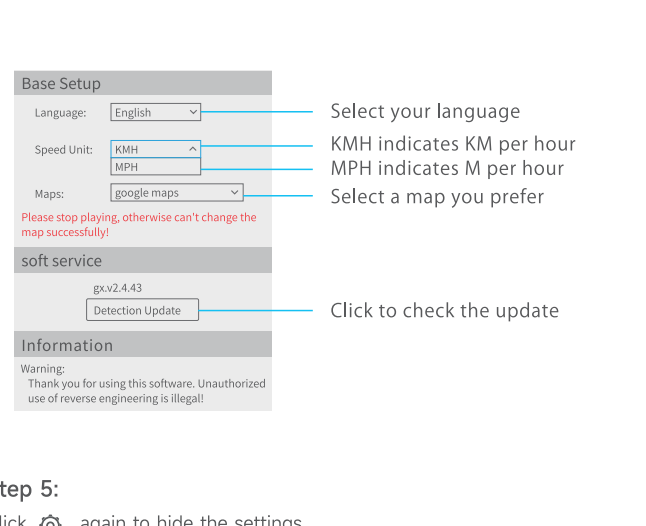


Step 5:

Click the OK button again to hide the settings.

Step 6:

Click the OK button at the lower part to select a video from the camera to play it. The GPS data of the selected video will be displayed on the right of the player.

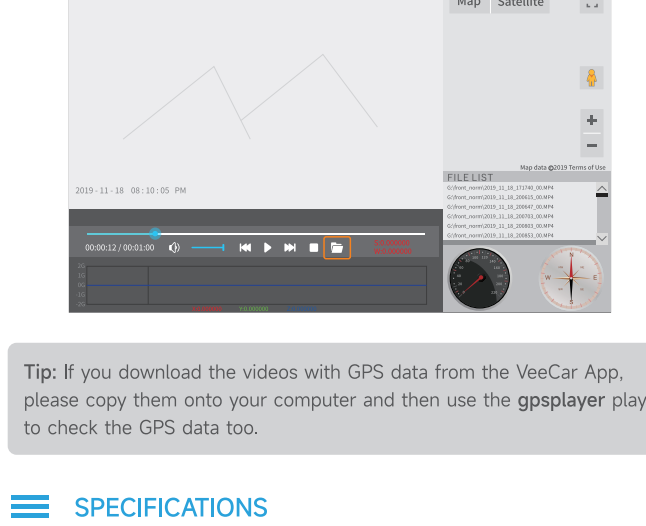

Tip: If you download the videos with GPS data from the VeeCar App, please copy them onto your computer and then use the gpsplayer player to check the GPS data too.

SPECIFICATIONS

Chipset	V35
CPU	ARM Cortex A7
Display Size	IPS 2 Inch
Display Resolution	360x480

TROUBLESHOOTING GUIDE

U1. Memory Card Reading Error

• Ensure the memory card is correctly installed.

• Navigate to Settings > Format to format the memory card.

• Consider trying a different U1 memory card from reputable brands like SanDisk, Samsung, Kingston, and others.

Q2. Video Recording Issues Or The Latest Video is Overwritten

• Ensure the memory card is not filled with locked videos. If it is, delete unnecessary videos or format the memory card.

• Navigate to Settings > G-sensor and set it to Low or Medium.

• Consider replacing the memory card with a new one.

Q3. Camera Automatic Restart.

• Ensure the USB cable has a secure connection.

• Remove the memory card to see if it's the cause.

Q4. A pause or frame skipping occurs when playing the videos or photos.

• Attempt using a different U1 memory card from a reputable brand and format it.

• Consider using a media player capable of decoding H.264 and H.265 compressed videos.

Q5. Unable to connect to WiFi.

• Ensure the WiFi on the dash camera is manually turned on.

• In your phone's wireless settings, locate the WiFi network named "GT801\_\*\*\*", and enter the initial password "12345678" to connect. Once successfully connected for the first time, your phone will automatically reconnect whenever the dash camera's WiFi is enabled.

Q6. The device emits a voice reminder of video locking, and the red flashing point on the screen turns yellow.

• While driving, the G-sensor function may activate due to sudden braking, collisions, or rough road conditions, resulting in a voice reminder and a change in the red flashing point on the screen to yellow. Adjust the G-sensor sensitivity in the settings or disable this function as needed.

WARRANTY AND CUSTOMER SERVICE

At (Your Brand Name), we offer a 12-month warranty covering product quality issues and a 45-day money-back and return guarantee for all our products.

If you have any questions or require assistance, please don't hesitate to reach out. Our dedicated customer service team is available around the clock, 24/7, via email at support@syndemos.vip and thru Amazon Messages.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Chipset

V35

CPU

ARM Cortex A7

Display Size

IPS 2 Inch

Display Resolution

360x480

Speaker

TW

Memory Card

Support up to 256GB (not included)

Connection

Type-C Port, Mini USB Port, AV In Port, Memory Card Slot

SensorFront Camera

GC4653

SensorRear Camera

FH-2085

ResolutionFront Camera

3840\*2160P

ResolutionRear Camera

1920\*1080P

Video Format

MP4

Photo Format

JPG

Q2. Video Recording Issues Or The Latest Video is Overwritten

• Ensure the memory card is not filled with locked videos. If it is, delete unnecessary videos or format the memory card.

• Navigate to Settings > G-sensor and set it to Low or Medium.

• Consider replacing the memory card with a new one.

Q3. Camera Automatic Restart.

• Ensure the USB cable has a secure connection.

• Remove the memory card to see if it's the cause.

Q4. A pause or frame skipping occurs when playing the videos or photos.

• Attempt using a different U1 memory card from a reputable brand and format it.

• Consider using a media player capable of decoding H.264 and H.265 compressed videos.

Q5. Unable to connect to WiFi.

• Ensure the WiFi on the dash camera is manually turned on.

• In your phone's wireless settings, locate the WiFi network named "GT801\_\*\*\*", and enter the initial password "12345678" to connect. Once successfully connected for the first time, your phone will automatically reconnect whenever the dash camera's WiFi is enabled.

Q6. The device emits a voice reminder of video locking, and the red flashing point on the screen turns yellow.

• While driving, the G-sensor function may activate due to sudden braking, collisions, or rough road conditions, resulting in a voice reminder and a change in the red flashing point on the screen to yellow. Adjust the G-sensor sensitivity in the settings or disable this function as needed.